
Wanderer 🛦 camping and outdoors

Owner's Manual

Warning:

- Keep gazebo away from heat sources and flame. The fabric will burn if left in continuous contact with any flame source.
- Always read and follow the instructions before use. To prevent injuries, be cautious to avoid pinching your hands or fingers in any of the moving parts as frame opens and closes.
- The gazebo is designed to provide shade only and should not be used as a permanent shelter or dwelling. Do not use this gazebo in strong wind and rain. Wind and rain can damage the gazebo and could result in injury to you and others.

Extra Reminder: This gazebo is for sun shade only. The water can pool in at the canopy fabric as indicated in below diagram and severely damage the gazebo. Please take a minute to take down the gazebo before rain!

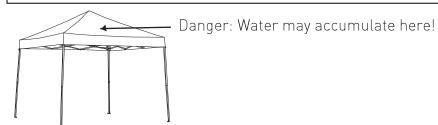

* Always stake or weigh down your gazebo at all times once set up. This gazebo is NOT a permanent structure. Do not leave the gazebo unattended. Take down and store it away after use. This gazebo requires a minimum of two people to erect. Keep all children away from the assembly area.

Care and maintenance

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.

 


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP.


Canopy should be attached and un-attached with every use, to avoid fabric rubbing through when transported.




1. Stand frame upright. Starting at the corners, with partner standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms'



 . Place the main canopy over the top frame. Use the Velcro pads to secure each corner of the canopy to the frame under the plastic leg caps.



 3. Each partner should then grasp the bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger or pull backward too hard as this may result in the bending of cross beams.



4. Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand. Repeat this operation at remaining corners.

5. Lift two adjacent outer legs and pull out inner legs gently until snap button locks. Repeat on the remaining legs. The gazebo offers three height levels. To adjust, lift the leg up, carefully push in the snap button and slowly pull out the inner leg until the snap botton pop in next position. Repeat on the other legs.



6. Gazebo must be firmly staked or properly weighted down at all times. Use guy ropes and anchors to secure the gazebo to ground or heavy objects. Make sure the guy ropes have the proper

THIS GAZEBO MUST BE SECURED TO THE GROUND

WITH ANCHORS AND GUY ROPES.

PLU: 521109 CODE: DR-OPPST

SRGS PTY LTD, ABN 23 113 230 050

Manufactured and packaged for

Strathpine QLD 4500, Australia

 
6 Coulthards Avenue

Made in China

TAKE-DOWN INSTRUCTIONS IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING TAKE-DOWN. PLEASE REMOVE ANCHORS AND GUY ROPES BEFORE TAKING DOWN.



1. With a partner, lift two adjacent outer legs slightly, depress snap button and telescope inner legs up into outer legs.




2. Release sliders at all four corners by gently depressing the push button and pushing the sliders down a bit. Make sure that all sliders are in an unlocked position. Closing the frame with any sliders in locked position will cause damage and/or breakage.



3. Remove canopy from frame. Take care to ensure all Velcro and ties are removed to avoid damaging the canopy. Ensure canopy is completely dry then fold and place in bag.



 4. With partner on the opposite side, grasp the upper portion of outer legs and slightly lift up. Shake the frame slightly and step towards partner until the frame is 3/4 closed. Be careful to avoid pinching your hands or fingers.



2 of 2

5. Grasp the adjacent outer legs and push the unit together until fully closed. Be careful not to pinch your fingers! And then return your folded pop up gazebo to the bag for storage.

1 of 2

Wanderer 🛦 camping and outdoors

Owner's Manual

Warning:

- Keep gazebo away from heat sources and flame. The fabric will burn if left in continuous contact with any flame source.
- Always read and follow the instructions before use. To prevent injuries, be cautious to avoid pinching your hands or fingers in any of the moving parts as frame opens and closes.
- The gazebo is designed to provide shade only and should not be used as a permanent shelter or dwelling. Do not use this gazebo in strong wind and rain. Wind and rain can damage the gazebo and could result in injury to you and others.

Extra Reminder: This gazebo is for sun shade only. The water can pool in at the canopy fabric as indicated in below diagram and severely damage the gazebo. Please take a minute to take down the gazebo before rain!



* Always stake or weigh down your gazebo at all times once set up. This gazebo is NOT a permanent structure. Do not leave the gazebo unattended. Take down and store it away after use. This gazebo requires a minimum of two people to erect. Keep all children away from the assembly area.

Care and maintenance

- Wash frame and canopy with a mild solution of soap and water, rinse
- thoroughly. Dry completely. Do not use bleach or solvents. • Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.



SET-UP INSTRUCTIONS

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP.

 
Canopy should be attached and un-attached with every use, to avoid fabric rubbing through when transported.




1. Stand frame upright. Starting at the corners, with partner standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.



2. Place the main canopy over the top frame. Use the Velcro pads to secure each corner of the canopy to the frame under the plastic leg caps.



 3. Each partner should then grasp the bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger or pull backward too hard as this may result in the bending of cross beams.



Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand. Repeat this operation at remaining corners.



5. Lift two adjacent outer legs and pull out inner legs gently until snap button locks. Repeat on the remaining legs. The gazebo offers three height levels. To adjust, lift the leg up, carefully push in the snap button and slowly pull out the inner leg until the snap botton pop in next position. Repeat on the other legs.



 
6. Gazebo must be firmly staked or properly weighted down at all times. Use guy ropes and anchors to secure the gazebo to ground or heavy objects. Make sure the guy ropes have the proper tension.



1. With a partner, lift two adjacent outer legs slightly, depress snap button and telescope inner legs up into outer legs.

TAKE-DOWN INSTRUCTIONS

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING TAKE-DOWN.




2. Release sliders at all four corners by gently depressing the push button and pushing the sliders down a bit. Make sure that all sliders are in an unlocked position. Closing the frame with any sliders in locked position will cause damage and/or breakage.



Remove canopy from frame. Take care to ensure all Velcro and ties are removed to avoid damaging the canopy. Ensure canopy is completely dry then fold and place in bag.



4. With partner on the opposite side, grasp the upper portion of outer legs and slightly lift up. Shake the frame slightly and step towards partner until the frame is 3/4 closed. Be careful to avoid pinching your hands or fingers.

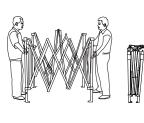

5. Grasp the adjacent outer legs and push the unit together until fully closed. Be careful not to pinch your fingers! And then return your folded pop up gazebo to the bag for storage.

THIS GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS AND GUY ROPES.

PLU: 521109 CODE: DR-OPPST Manufactured and packaged for SRGS PTY LTD, ABN 23 113 230 050 6 Coulthards Avenue Strathpine QLD 4500, Australia Made in China