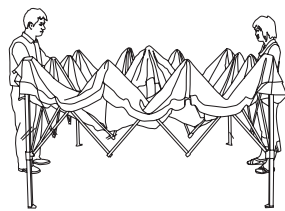
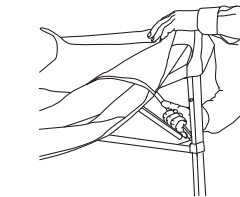


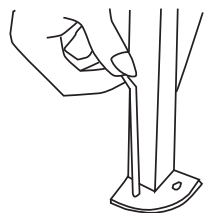
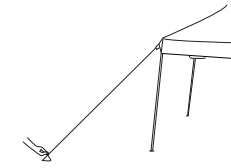
 
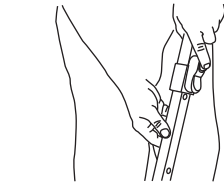
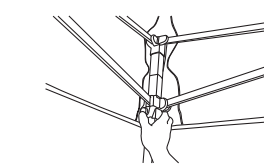
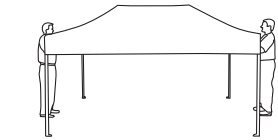


- 
- 
- 
- 
- Each person should then grasp the bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger and not pull backward too hard as this may result in the bending of cross beams.
 - Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand until it locks in to place. Repeat this for the rest of corners.
 - Using the clip attach the strap around the lowest point of the beam next to the hinge.
 - Lift two adjacent outer legs and pull out inner legs gently until spring loaded snap button pops in position. Repeat on the other two legs. The gazebo offers three height levels. To adjust, lift the leg up, carefully depress the push button at knuckle and slowly pull out the inner leg till the snap button pops in next position. Repeat on the other legs. Be careful do not overpull the leg and exceed maximum height.

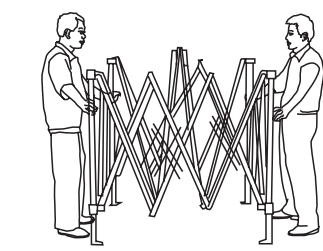
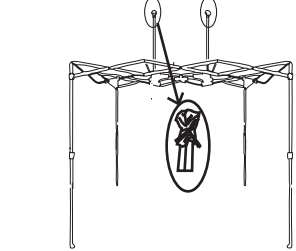
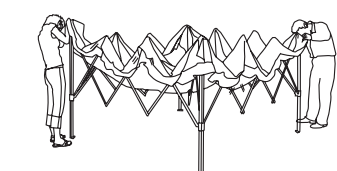
page 3 of 6

- 
- 
- Peg down the gazebo by driving the 4 small pegs through one of the holes on the base of each foot. This will keep the leg from moving sideways in mild weather conditions.
 - Tie up one end of each guy rope to the triangular shaped rope holder located on the outside fabric corners. Pull the guy rope out from the corner of the gazebo towards the ground at a 45 degree angle. Hammer one of the larger pegs in to the ground and secure the guy rope firmly to it. Make sure the guy ropes have adequate tension.
THE GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS AND GUY ROPES!

page 4 of 6

- ### PACK-DOWN INSTRUCTIONS
- IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING TAKING-DOWN. PLEASE REMOVE ANCHORS AND GUY ROPES BEFORE TAKING DOWN.**
- 
- 
- 
- 
- Detach the clips from each side of cross section beams.
 - Release push button on each leg and shorten the frame to its original height prior to extending the legs during set-up.
 - CRITICAL STEP TO AVOID FRAME DAMAGE!**
Release sliders at all four corners depressing the push button and gently pushing the corners down slightly.
 - Remove canopy to avoid the frame causing any damage to it and pack away separately in the storage pocket on the front of the bag. With partner on the opposite side, grasp the middle section of the frame and lift up slightly.

page 5 of 6

- ### SET-UP INSTRUCTIONS
- IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP**
- 
- 
- 
- Stand frame upright. Starting at the corners, with person standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.
 - Take out the pocket from canopy pack and place it onto the top of center pole and tie it up as an extra protection.
 - Place the main canopy over the top frame. Use the Velcro pads to secure each corner of the canopy to the frame under the plastic leg caps.

page 2 of 6

W a n d e r e r 

Instruction Manual



PLU: 638462
HEAVY DUTY 4.5X3M GAZEBO

PLU: 638462 CODE: HY-CH002
Manufactured and packaged for
SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue
Strathpine QLD 4500, Australia
MADE IN CHINA

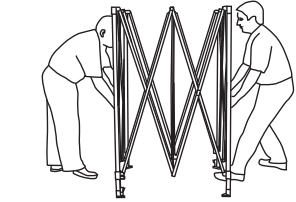
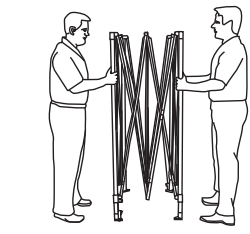

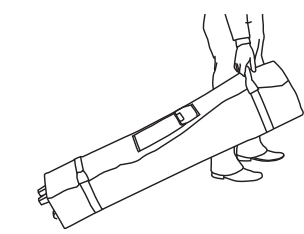
WARNING:

- Keep all flame and heat sources away from this gazebo. The fabric will burn if left in continuous contact with any flame source. Do not build fires under the canopy top.
- Always peg down and secure your gazebo with guy ropes. It's crucial to do this any time you have the gazebo up to minimize the impact of unexpected wind gusts.**
- The gazebo is designed to provide shade only. Do not use this gazebo in strong wind and heavy rain. Wind and heavy rain can damage the gazebo and could result in injury to you and others. Always stake or weight down your gazebo at any time once set up. This gazebo is NOT a permanent structure.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts as frame opens and closes.
- The gazebo is designed as a temporary sun shelter, not a permanent structure. Do not leave up for extended periods and do not leave the gazebo unattended. Take down the gazebo and store away after use.
- Do not use your gazebo in lightning storms or in extreme weather conditions.
- The set up of this gazebo requires a minimum of two people. Keep children away from the set up area.

CARE AND MAINTENANCE:

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.

page 1 of 6

- 
- 
- 
- 
- Walk forward slowly allowing for the frame to fold inward and close. Be careful not to pinch fingers or hands as you close the frame.
 - Completely close the frame with or without the canopy attached.
 - Stand the closed frame on the ground, and pull the storage bag top down over the frame. Carefully lay down the storage bag, then flip the bottom on and zip the storage bag completely shut. Please do not drop the frame during the process to avoid damage the frame. Be sure the gazebo is completely dry before storage.
 - Wheel your gazebo to your desired storage area.

page 6 of 6