


OBD2 PORT LOCK

4 EASY TO FOLLOW STEPS TO COMPLETE THE INSTALLATION AND HELP PROTECT YOUR VEHICLE AGAINST THEFT.

STEP 1:

Select the correct bracket for your vehicle:

- "G" suits selected GM vehicles.
- "A" suits all other vehicles.

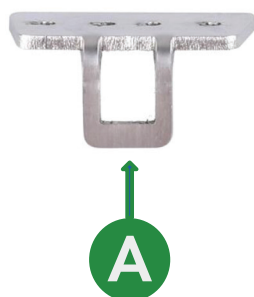

NOTE: Test fit bracket before fully installing, there should almost no movement.

STEP 2:

Place the bracket on the OBD2 port in the correct orientation.



NOTE: You can use the included double-sided tape to help with securing the bracket.

STEP 3:


Place the metal cover over the OBD2 plug and bracket and secure with 4 screws and screwdriver.



NOTE: Typically, the longer screws are the correct choice. Using alternating screws can also help deter potential thieves.

STEP 4:

Place the blanking sticker over the end of the metal cover to hide the screw heads.

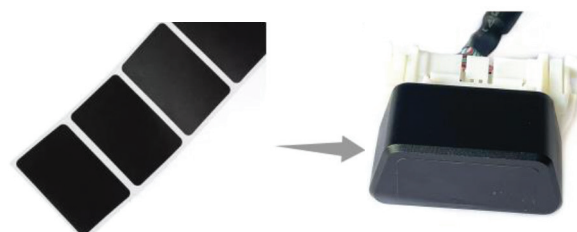

NOTE: For better security do not keep the included screwdriver in your vehicle.

